



Toilet Pan Fixing Kit (Straight)

Installation Instructions


Parts Supplied

(two of each of the following)

- A. Cap
- B. Stainless Steel Screw
- C. Nylon Bush
- D. Nylon Plug

Tools Required (not supplied)

- 1 x drill
- 1 x 9mm drill bit
- 1 x hammer
- 1 x cross head screwdriver

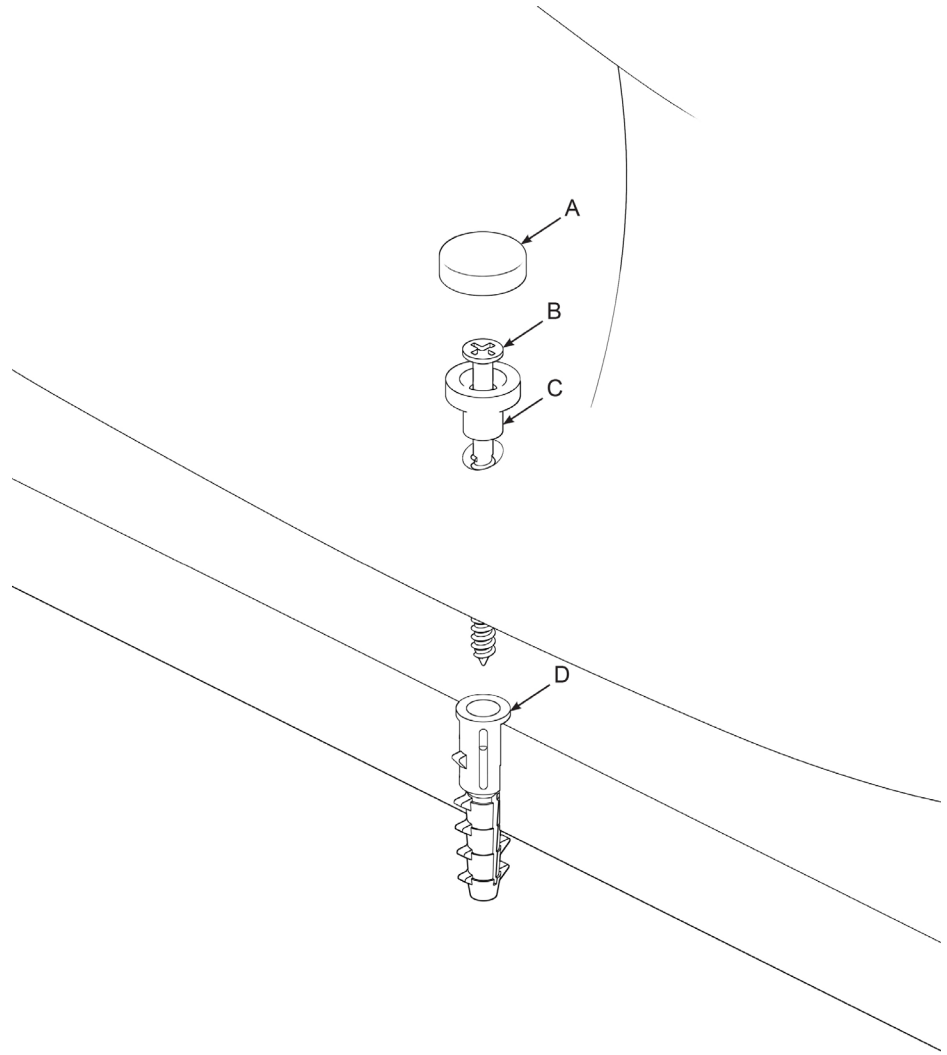

Assembly

1. Check and familiarise yourself with all the components.
2. Prior to carrying out the work, check the position of the W.C. and mark out holes that need to be made.
3. Drill holes in marked positions and insert nylon plugs (**D**) inside the holes made.
4. Put the W.C. pan into position and take nylon bush (**C**) and place into the hole in the ceramic W.C. pan.
5. Now take screw (**B**) and using a screwdriver tighten through nylon bush (**C**) and into nylon plug (**D**) situated in the floor. Please do not over tighten.
6. To finish place cap (**A**) over nylon bush (**C**).
7. This should be repeated on both sides of the W.C. pan.
8. Finally check installation and ensure pan is secure to the floor and does not move.



IMPORTANT INFORMATION

We accept no liability for products fitted incorrectly, and where the correct testing procedures have not been used, resulting in the escape of water. The finished surfaces on the product are hard and durable and we recommend regular cleaning to maintain their appearance. They should only be cleaned with warm soapy water, under no circumstances should any aggressive or abrasive cleaning agent be used as it can lead to deterioration of the high quality finish.

FOR MORE INFORMATION ABOUT ANY OF OUR PRODUCTS VISIT

www.vivasanitary.co.uk

UK - Units 1-3 Capitol Trading Park, Kirkby Bank Road,
Knowsley Industrial Estate, Liverpool, L33 7SY
EU - Authorised Rep Compliance Ltd., GroundFloor,
71 Lower Baggot Street, Dublin, D02 P593, Ireland.

For more information please contact us:
Tel: 0151 546 0531 E-mail: sales@vivasanitary.co.uk