



Basket Strainer Waste Installation Instructions


Parts Supplied

(one of each of the following)

- A. Strainer plug
- B. Screw
- C. Strainer waste grating
- D. Foam washer
- E. Rubber washer
- F. Waste body

Tools Required (not supplied)

1 x large flat head screwdriver

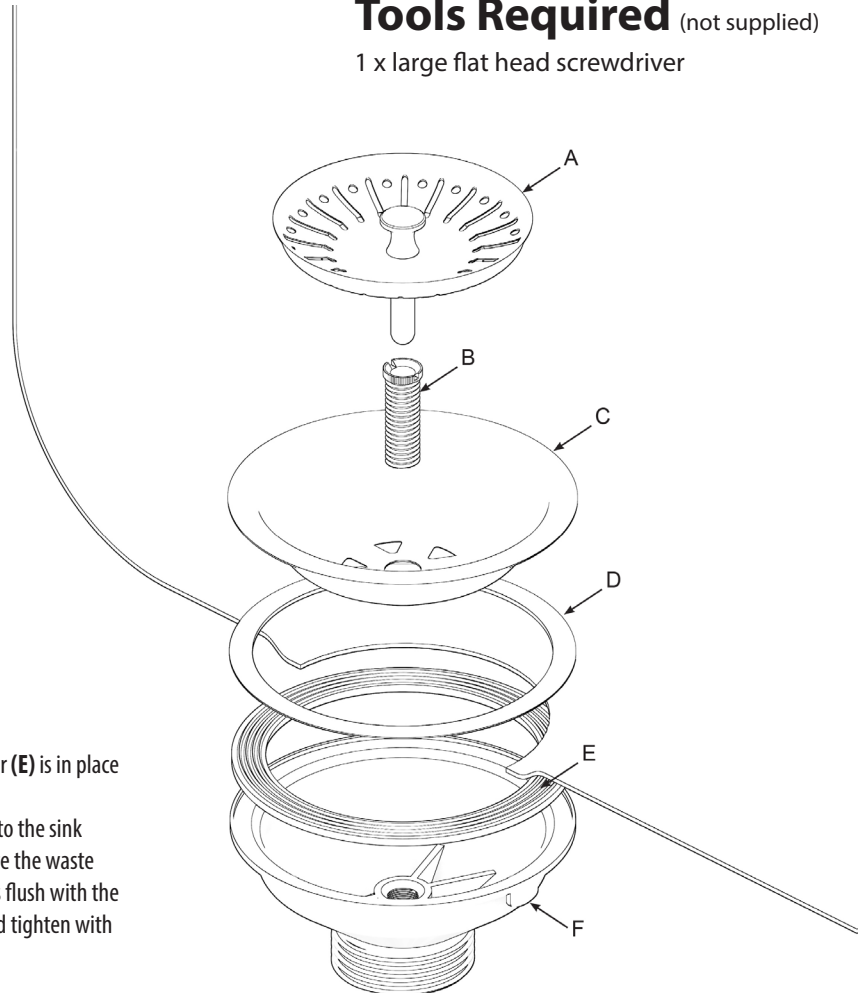

Assembly

1. Check and familiarise yourself with all the components.
2. Take the main body of the waste (F) to the Sink, ensuring rubber washer (E) is in place ready for installation.
3. To secure to the waste outlet on the sink, place the foam washer (D) onto the sink outlet hole, and place the steel strainer waste grating (C) on top. Locate the waste body (F) on the underside of this hole ensuring the rubber washer (E) is flush with the underside of the sink. Now everything is in place take the screw (B) and tighten with a large flathead screwdriver. Please do not over tighten.
4. Check strainer plug (A) is working correctly.
5. To check all joints fill the sink with water and inspect for any leaks. We advise doing this in stages starting with a small amount of water, before fully filling sink.



IMPORTANT INFORMATION

We accept no liability for products fitted incorrectly, and where the correct testing procedures have not been used, resulting in the escape of water. The finished surfaces on the product are hard and durable and we recommend regular cleaning to maintain their appearance. They should only be cleaned with warm soapy water, under no circumstances should any aggressive or abrasive cleaning agent be used as it can lead to deterioration of the high quality finish.

FOR MORE INFORMATION ABOUT ANY OF OUR PRODUCTS VISIT

www.vivasanitary.co.uk

UK - Units 1-3 Capitol Trading Park, Kirkby Bank Road,
Knowsley Industrial Estate, Liverpool, L33 7SY
EU - Authorised Rep Compliance Ltd., GroundFloor,
71 Lower Baggot Street, Dublin, D02 P593, Ireland.

For more information please contact us:

Tel: 0151 546 0531 E-mail: sales@vivasanitary.co.uk